




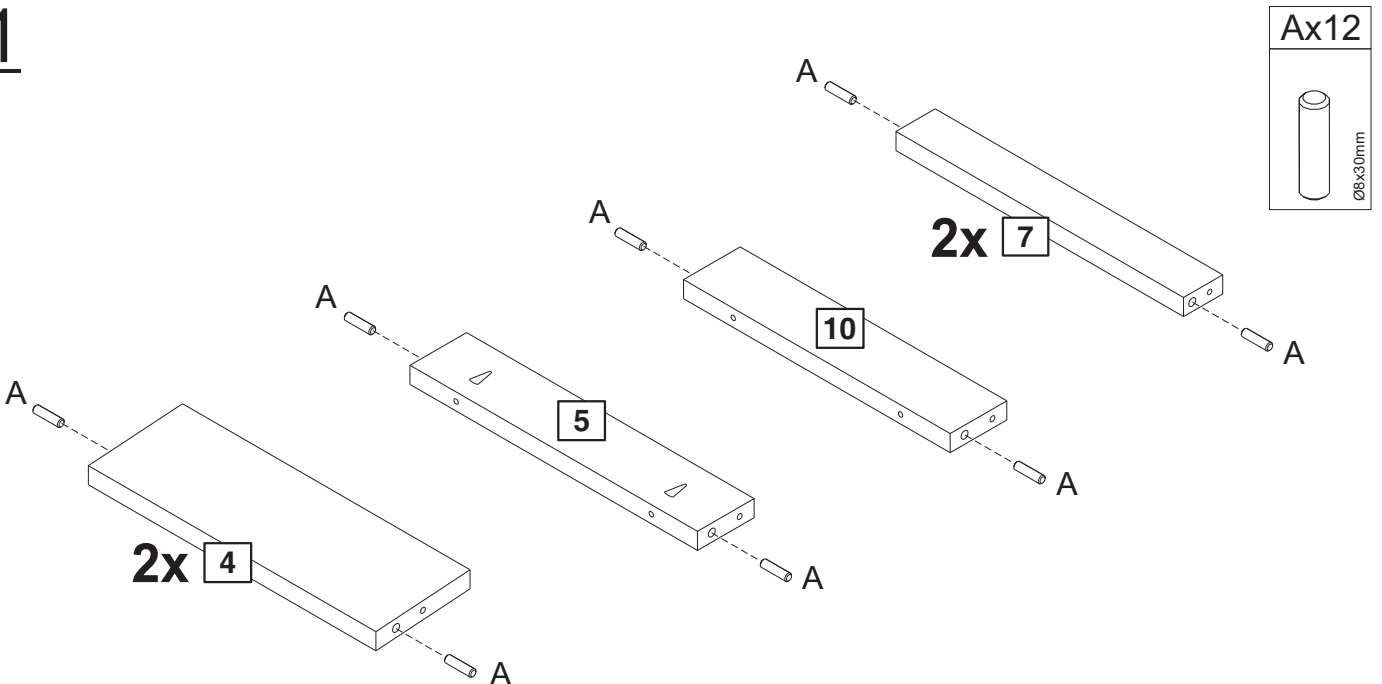

1


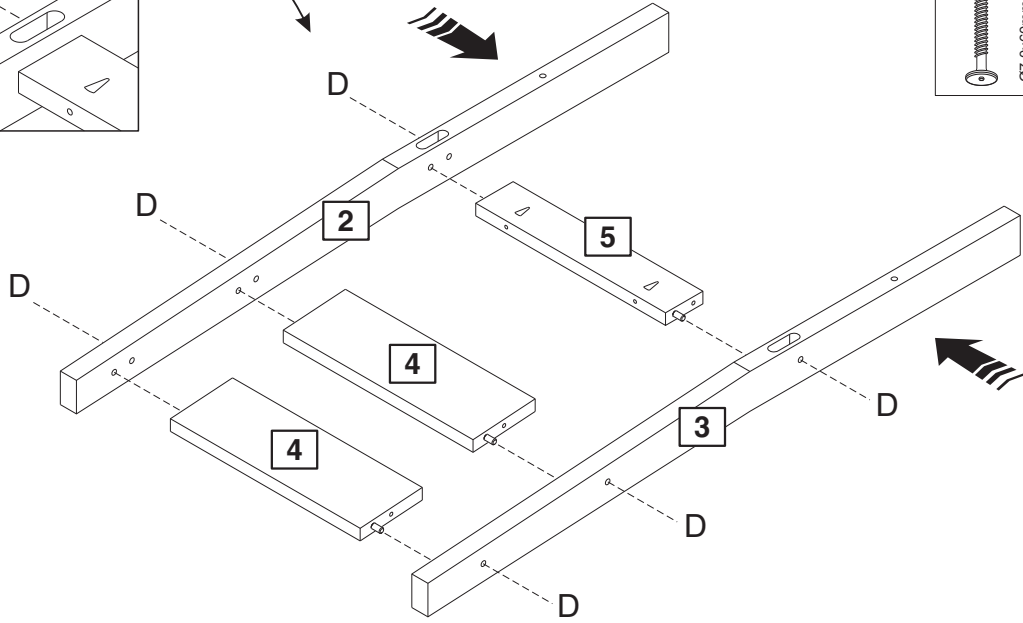


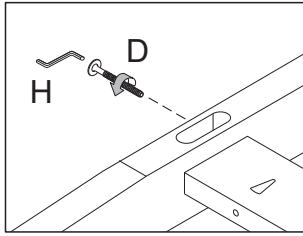

2





Dx6	Hx1
	
$\text{Ø}7,0 \times 60\text{mm}$	

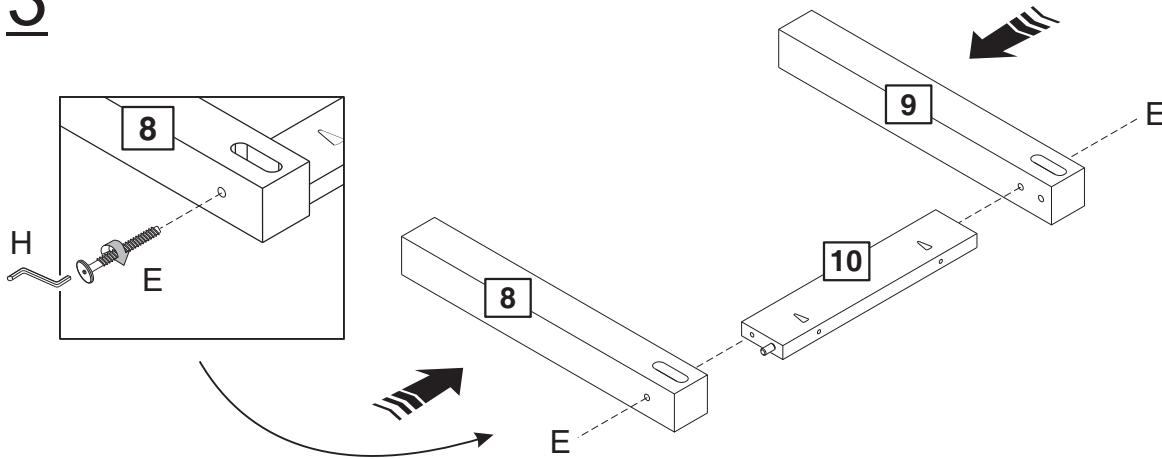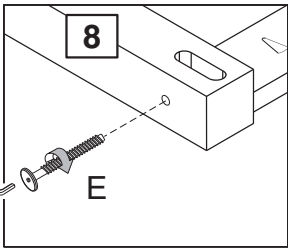



3

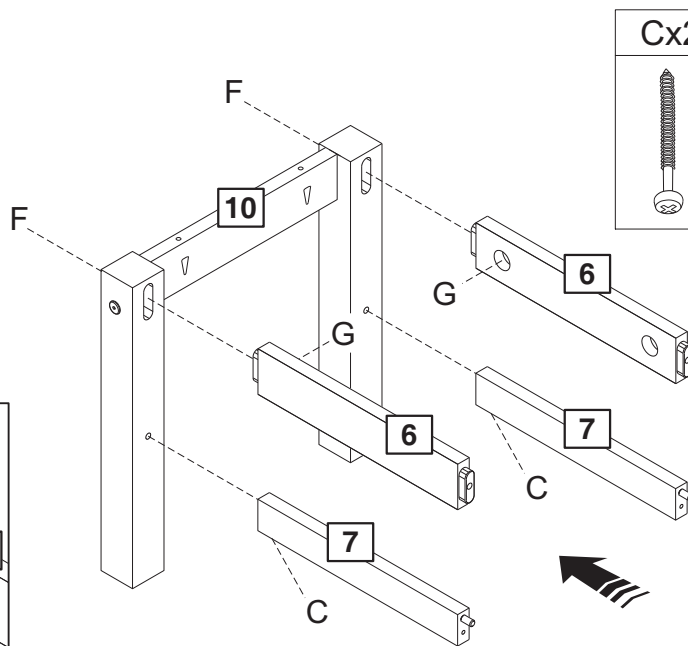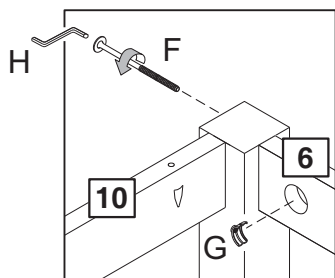


Ex2	Hx1
	
$\text{Ø}7,0 \times 80\text{mm}$	





4

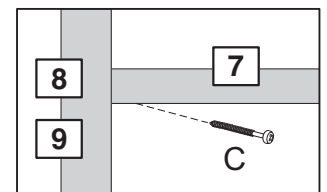


Cx2	Fx2	Gx2	Hx1
			
$\text{Ø}4,5 \times 50\text{mm}$	$\text{Ø}1,4 \times 130\text{mm}$		




5


Cx2	Fx2	Gx2	Hx1
 Ø4,5x50mm	 Ø1,4x130mm		

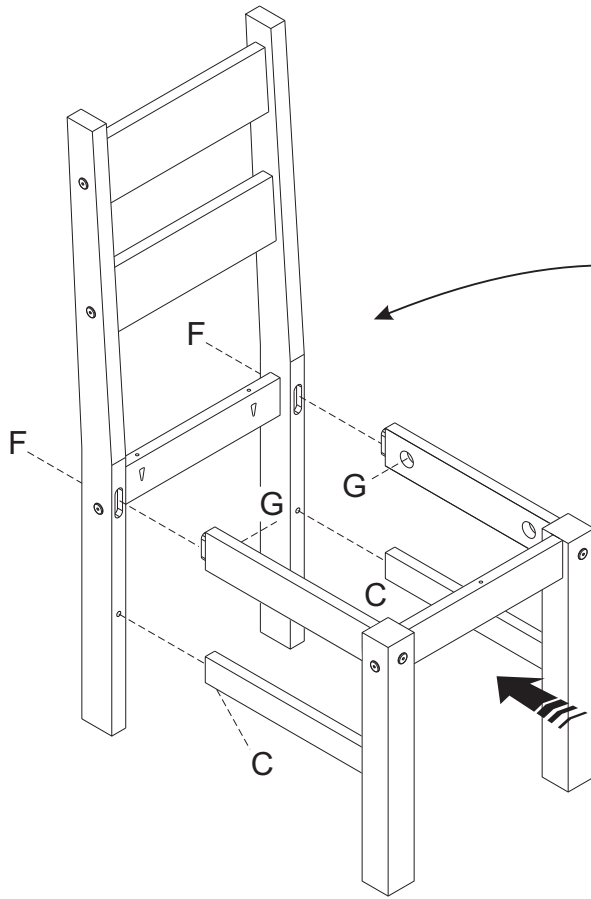


a:

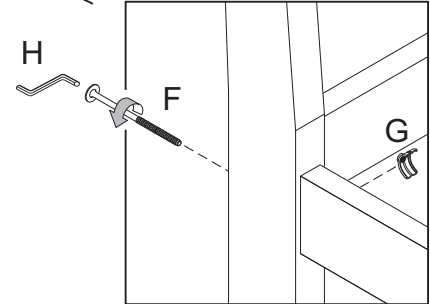

b:

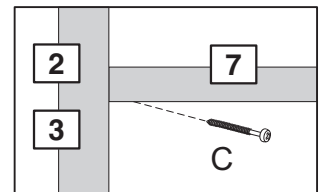

6

Bx4
 Ø4,0x35mm

